

#### Procedure for the replacement flextor

## 1. Tools necessary


- 2 mm conic hunting pin
- A plier or crocodile clip
- A hammer or a plastic mallet



# 2. Operations

## a) Extract the 2 pins

- Use the 2 mm conic hunting pin: place it into the 2,4 mm home inside the aluminium plate of the low tech.
- Kick the 2mm hunting pin with the hammer. Look at the pin out on the 2<sup>nd</sup> photo

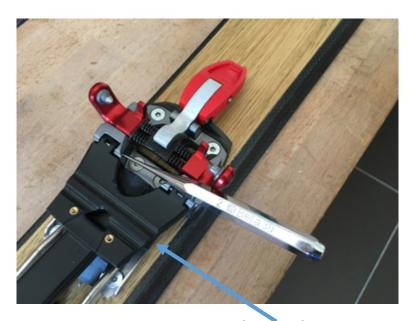




Note: the flextor is a small model (2 stripes) on this photo.

Document Inwild Page 1

#### Extract the pin with the plier

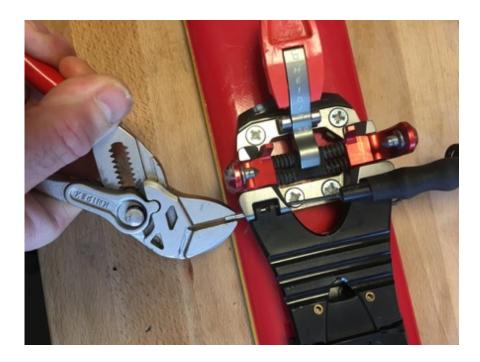

### b) Mounting of the flextor

- Engage the 2 knurled pin with the knurled part place outside.
- Place the flextor and be careful to introduce the pin inside the flextor
- Push the pin with the plastic mallet. You can-use the conic hunter if you want. Push completely the pins till they are completely inside the holes.



Note: On the photo the flextor is a Large model (3 stripes)

Document Inwild Page 2