


A

Plan de perçage SIMPLL - Drilling Pattern SIMPLL

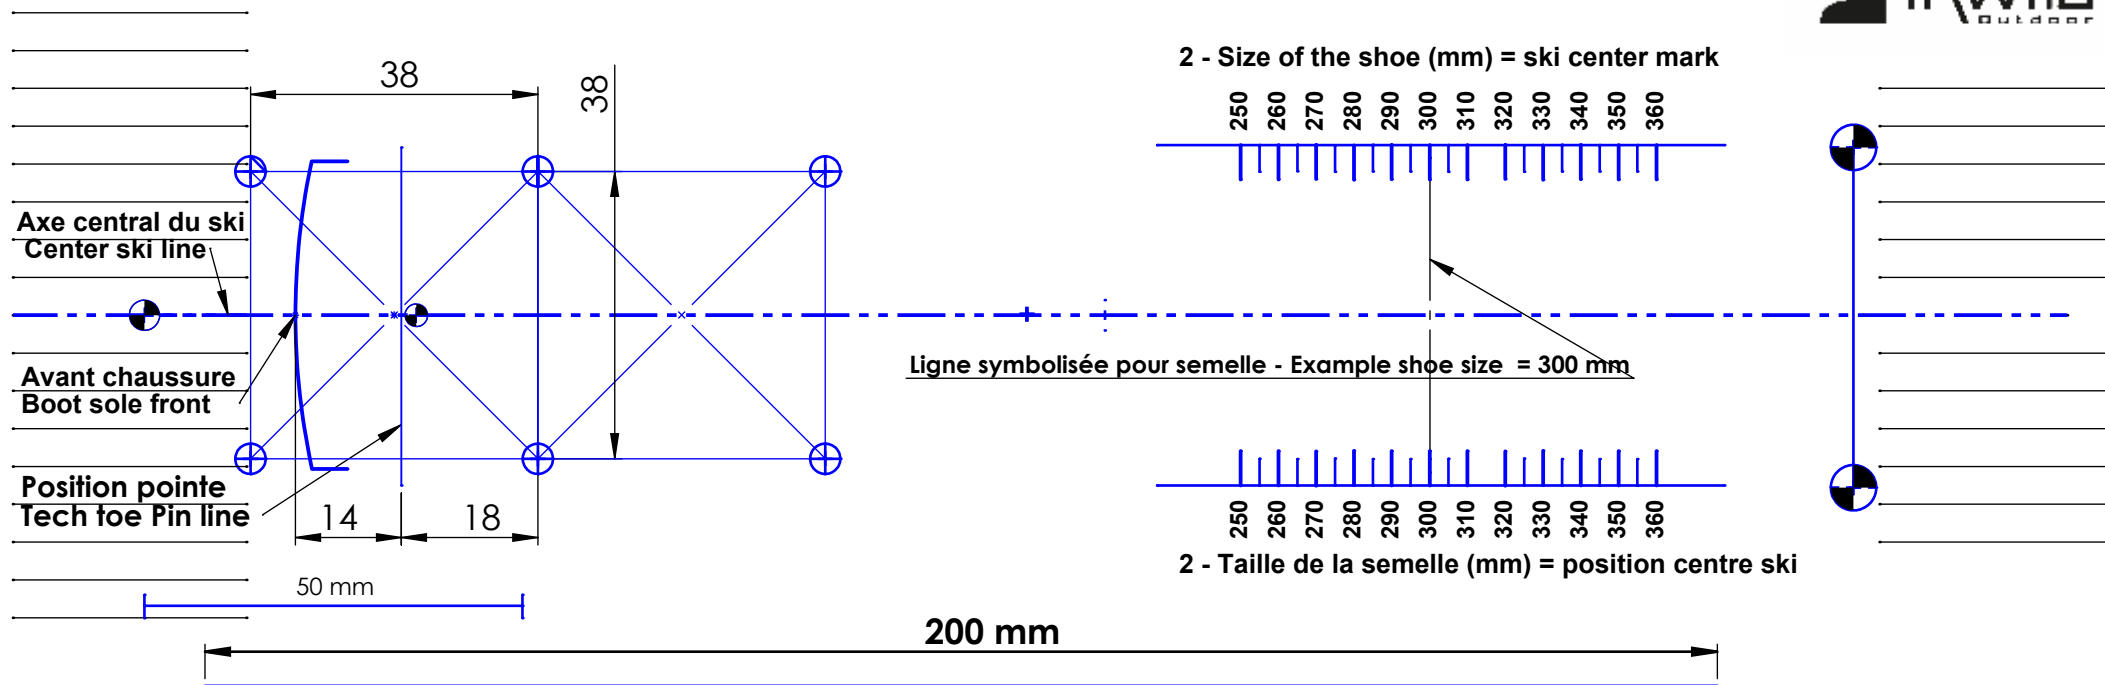


If you print the drilling pattern - print it with no scale and check if the 200 mm line is correct.

Cut the drilling pattern along the line
You have now 2 drilling patterns A and B.
Check the size of your boot and the ski mark center.

1. Place the pattern A one the center ski line of your ski
2. Align the scale '2' onto the ski center mark
3. Place the pattern B and align the scale 3 onto Ski center mark
4. Check with your boot (Boot sole front and back & shoe center)
5. Drill the 13 holes with a $\varnothing 3,6$ mm and 9 mm length drill.
6. Clean the holes
7. Fix your binding

3 - Size of the shoe (mm) = ski center mark

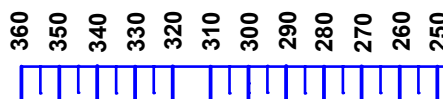

Ligne symbolisée pour semelle - Exemple shoe size = 300 mm



3 - Taille de la semelle (mm) = position centre ski

XXXXX Binding

A adapter en fonction de la taille des autres chaussures à monter

9,50 ± 8

22

Arrière chaussure - Boot sole back